

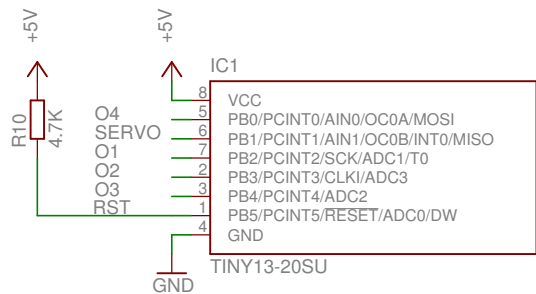



ISP Connector

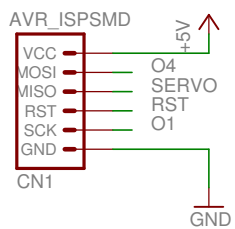




External Supply
Use Jumper only if
external Supply is NOT used

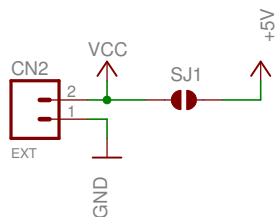

Servo Connector

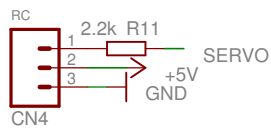

Optional Hall Sensor

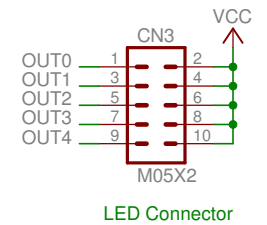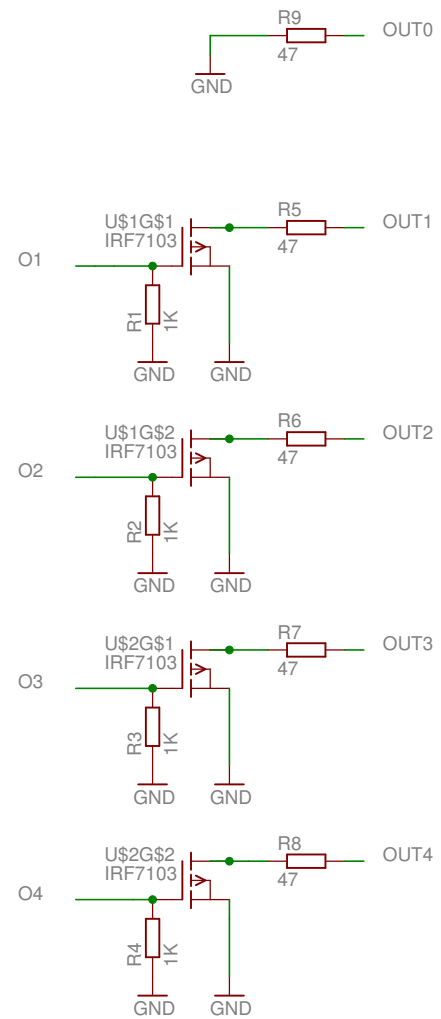 

Color	5V	12V
Red	150R	560R
Yellow	150R	560R
Blue	90R	470R
Green	90R	470R
White	90R	470R
Pink	90R	470R

TITLE: rclight

Author: Heinz Bruederlin

REU:

Date: 28.10.09 22:25

Sheet: 1/1